

FIG. 1


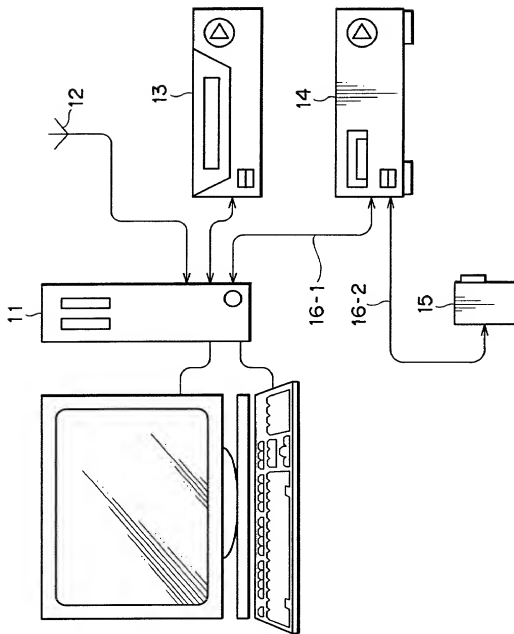 


FIG. 2

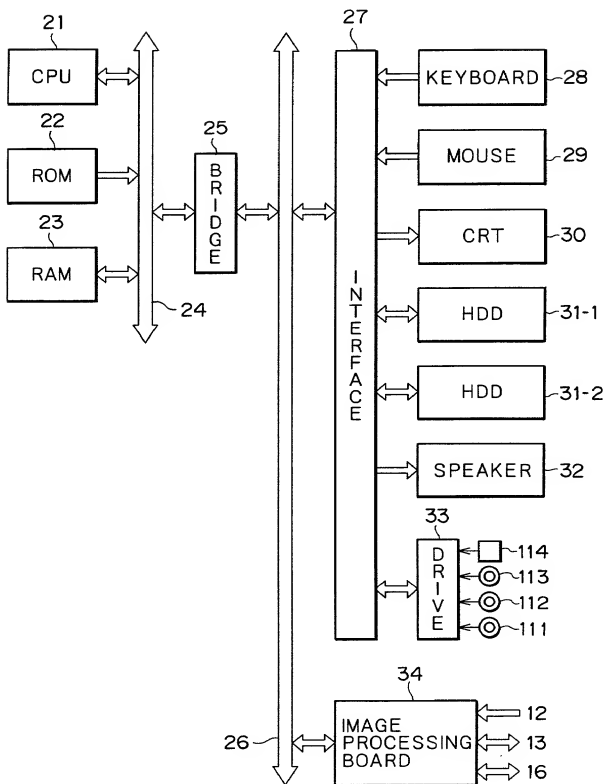 

102020-87457700

FIG. 3



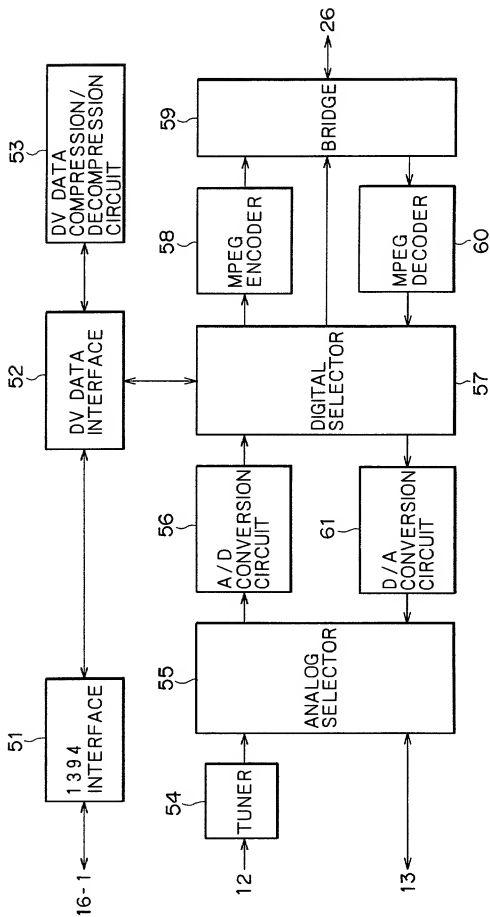 



FIG. 4

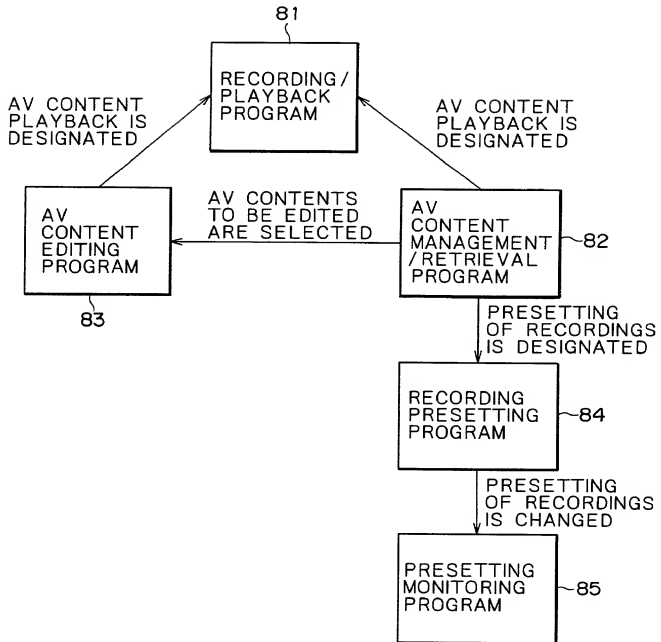 


09773918.020001

   FIG. 5

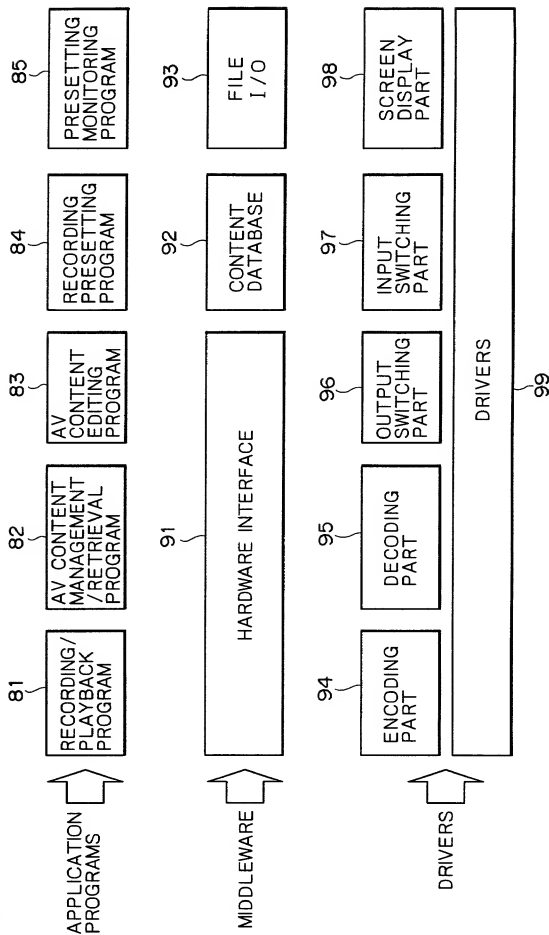

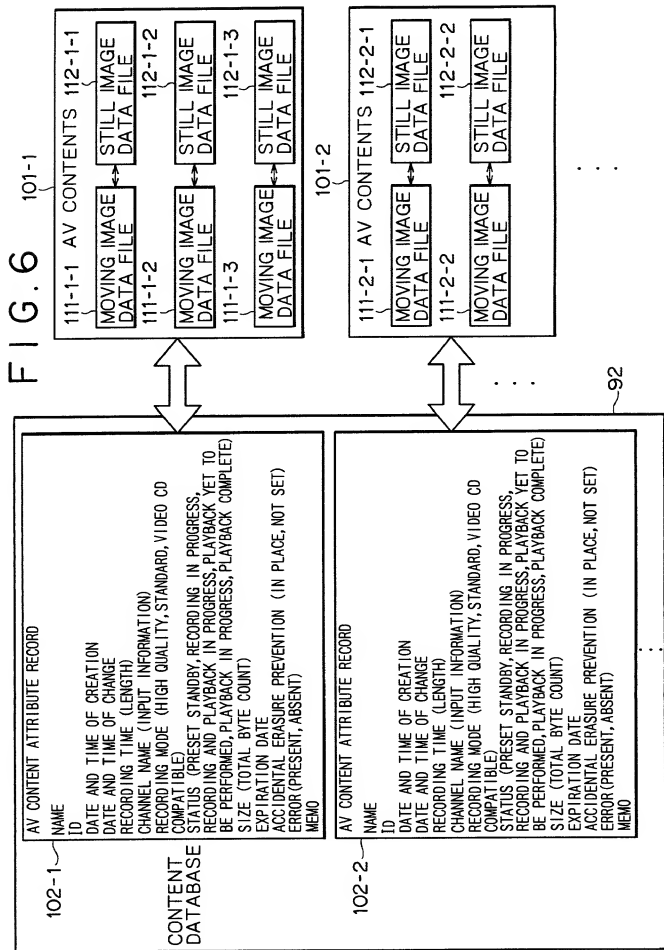


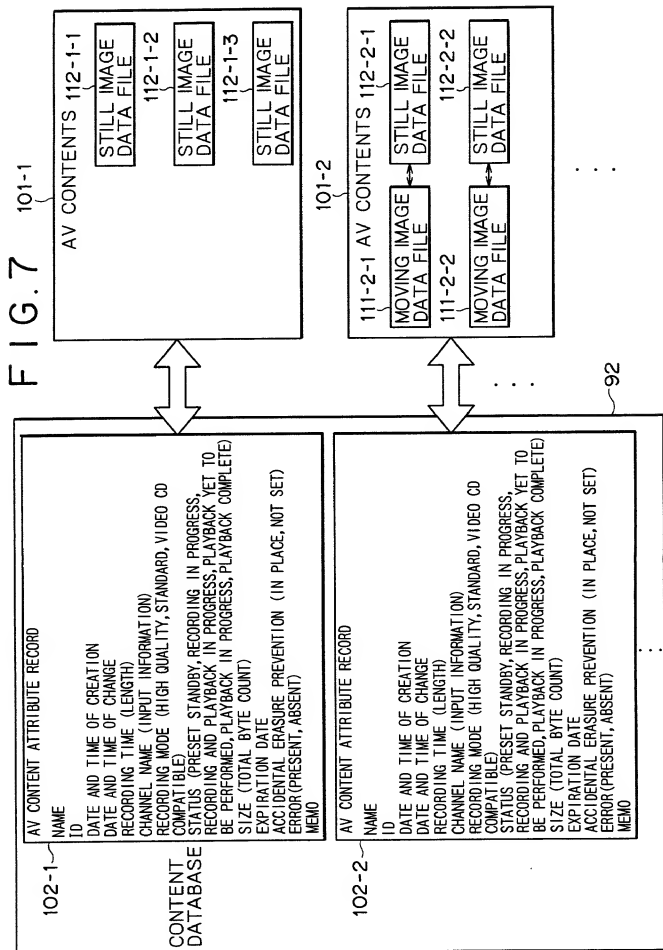

92

FIG. 8

 121-1

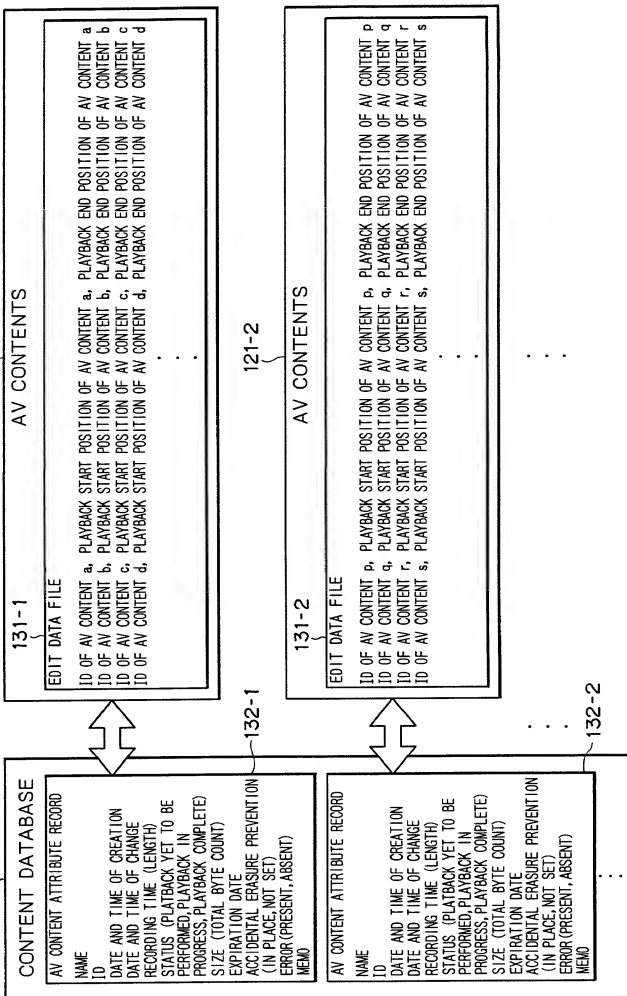

உ-6-9



FIG. 10

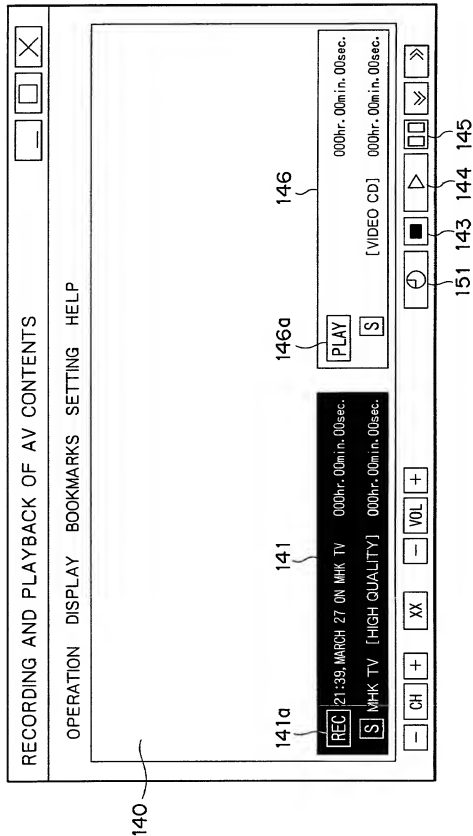 


FIG.11A

 


FIG.11B

 


FIG.11C

 


FIG. 12

SETTING OF RECORDING END TIMES

SET TIMES AT WHICH TO END RECORDING

☒ SET PERIOD OF TIME TO ELAPSE FROM START OF RECORDING

END AFTER: 30min. ▼

☐ SPECIFY WHEN TO END RECORDING

END AT: 1hr.
1hr. 30min.
2hr.
2hr. 30min.
3hr. MINUTES

☐ SPECIFY MAXIMUM RECORDABLE TIME

END AT: 23:22, FEBRUARY 24

OK CANCEL HELP

102020-6162760

FIG.13

09773918-020001

SETTING OF RECORDING END TIMES

— SET TIMES AT WHICH TO END RECORDING —

☐ SET PERIOD OF TIME TO ELAPSE
FROM START OF RECORDING

END AFTER: 30min. ▼

☐ SPECIFY WHEN TO END RECORDING


END AT: 12 hr. 34 min.

☒ SPECIFY MAXIMUM RECORDABLE TIME

END AT: 23:22, FEBRUARY 24

OK CANCEL HELP

 FIG. 14

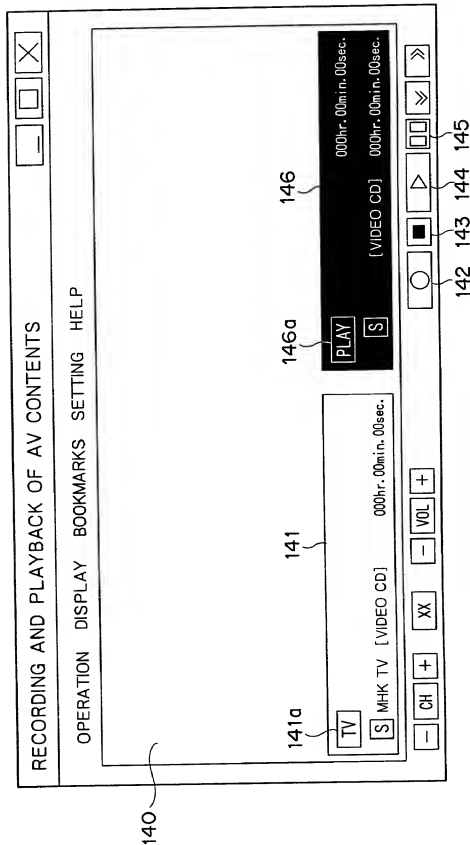

The diagram shows a control interface for a video player. At the top, there are three buttons: a square, a circle, and an 'X' button. Below these are the labels 'RECORDING AND PLAYBACK OF AV CONTENTS', 'OPERATION DISPLAY', 'BOOKMARKS', 'SETTING', and 'HELP'. The main display area is divided into two sections. The left section, labeled 140, contains a 'TV' button (141a) and a 'S' button (141b) with the text 'M-HK TV [VIDEO CD]' and '000hr.00min.00sec.'. The right section, labeled 146, contains a 'PLAY' button (146a) and an 'S' button (146b) with the text '[VIDEO CD]' and '000hr.00min.00sec.'. Below the display area are several control buttons: a minus button, a 'CH' button, a plus button, an 'XX' button, a minus button, a 'VOL' button, a plus button, a circle button, a square button, a right arrow button, a double left arrow button, a double right arrow button, a left arrow button, and an up arrow button. To the right of these buttons is a vertical timeline (172) with various icons representing different scenes or chapters. A vertical slider (173) is located to the right of the timeline. A large arrow (147) points from the top right towards the center of the display area.

102020-816E160

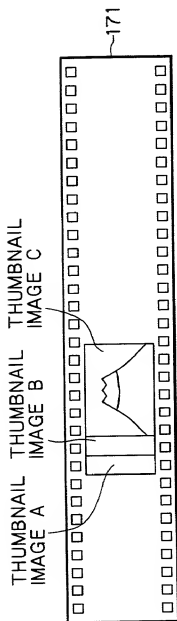 


FIG. 16A

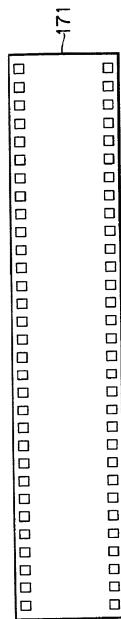 


FIG. 16B

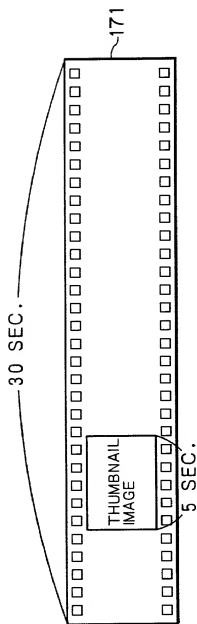 


FIG. 17A

 


FIG. 17B

102020-3162260

F I G. 18

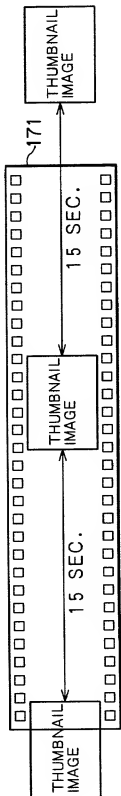 


FIG. 19


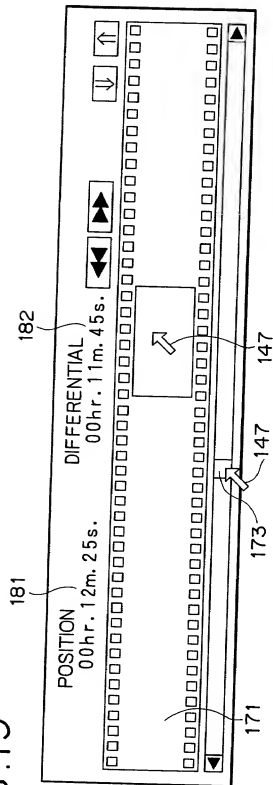 


FIG. 20

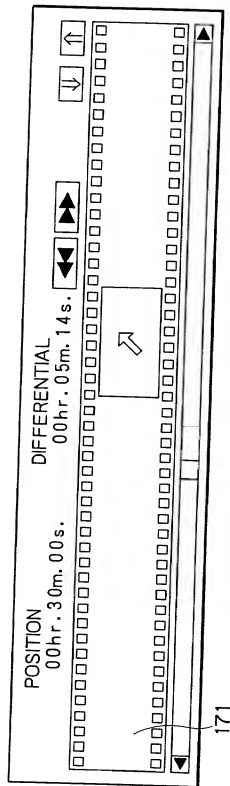 

102020-6163260

FIG. 21A

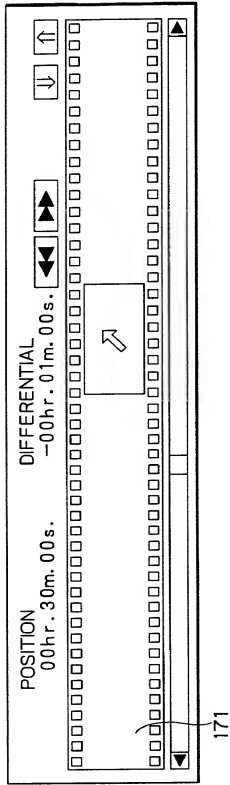 


FIG. 21B

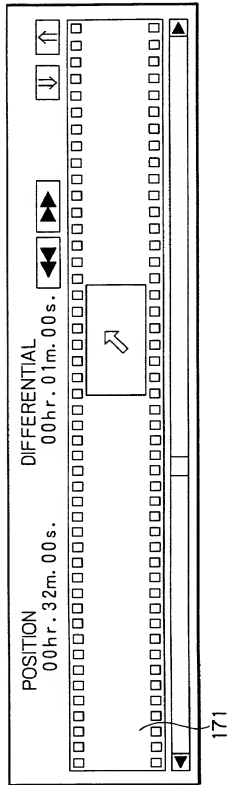 


FIG. 22



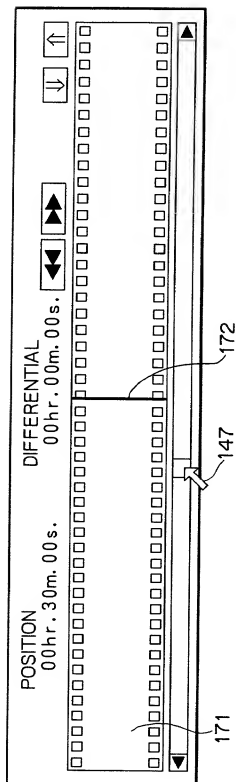 


FIG. 23

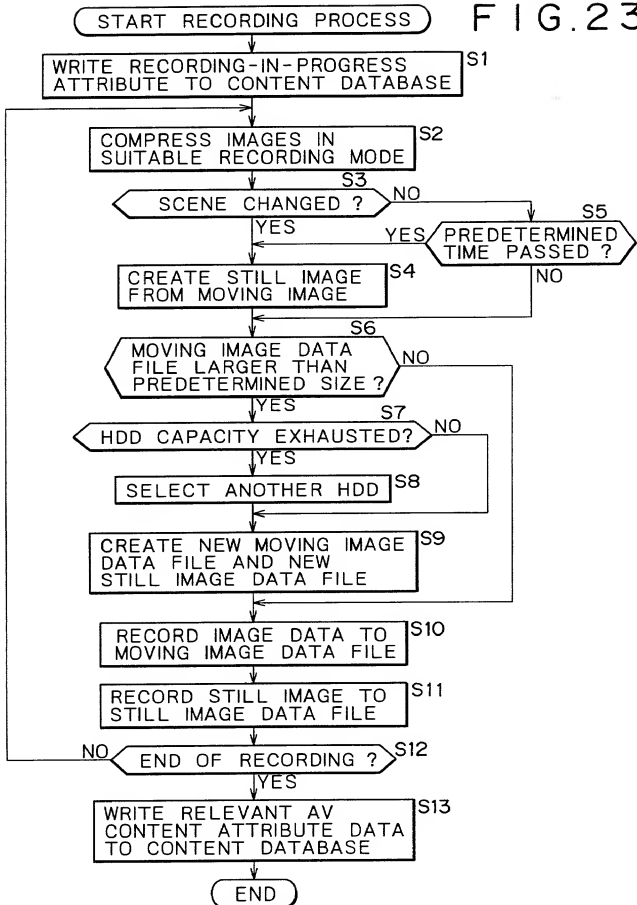 


09773918.002001

 FIG. 24

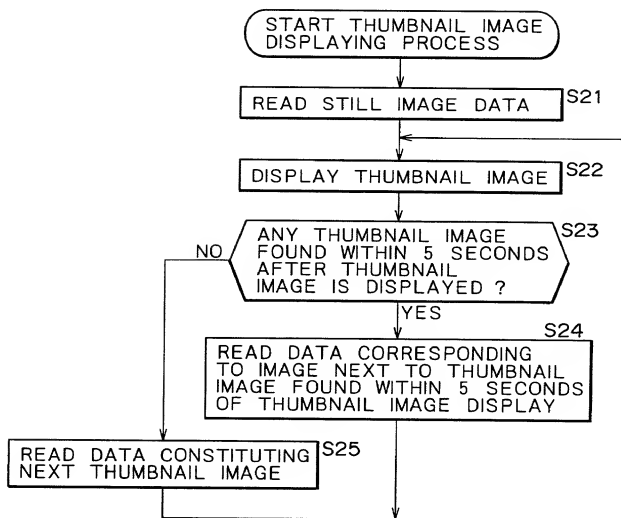

09773919-020201

 FIG. 25

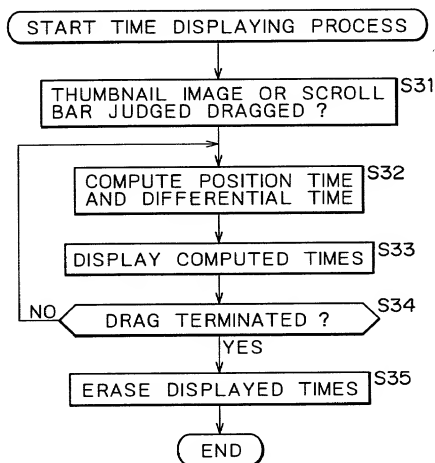

09773918-020201